


PROPER THROTTLING VALVE ADJUSTMENT

- 1) OPEN THROTTLING VALVE TO FULL FLOW BY TURNING THE CAP COUNTER-CLOCKWISE UNTIL IT STOPS.
- 2) TURN ON ONE ELECTRIC SOLENOID VALVE AND ADJUST SPRAY PRESSURE TO THE APPLICATION PRESSURE.
- 3) TURN OFF ELECTRIC VALVE SO LIQUID FLOWS THROUGH THROTTLING VALVE.
- 4) TURN CAP ON THROTTLING VALVE CLOCKWISE UNTIL SPRAY PRESSURE EQUALS APPLICATION PRESSURE.
- 5) THROTTLING VALVE IS NOW PROPERLY ADJUSTED.

NOTE:

WHEN USING MORE THAN ONE ELECTRIC SOLENOID VALVE, ADJUST EACH BOOM SECTION INDIVIDUALLY.

DESCRIPTION:
SECTIONAL DRAWING OF A
AA144A-1-3 DIRECTOVALVE &
NO. 23520 THROTTLING VALVE

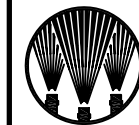

Spraying Systems Co.[®]

Spray Nozzles and Accessories
P.O. Box 7900 - Wheaton, Il. 60189-7900

Rev. No.

Data Sheet No.

Ref.

144A-1-3

SHEET 2 OF 2