FZSAAE

4-GALLON BACKPACK & ROLLER LITHIUM-ION SPRAYER

OPERATION GUIDE



Let's get spraying!

You have chosen one of the leading multi-purpose sprayers available today. It can be used either as a backpack or rolling sprayer to emit any number of solutions and solvents for both home and professional use. Please read this manual carefully to ensure that you get the

most out of your new sprayer.

Because FlowZone™ sprayers are distributed exclusively by WESSOL™, you can rest assured that you are working with a world-class sprayer and friendly customer service.

If you need assistance with the assembly or operation of your sprayer, please don't hesitate to contact us:

K

www.fzspray.com/support spraysquad@fzspray.com



+1 803 339 2500



Here's what your sprayer is capable of doing.

This FlowZone sprayer is a highly efficient sprayer that is suitable for spraying many kinds of water-soluble chemicals such as fertilizers, pesticides, cleaning products, etc. Never operate the sprayer with strong acids, strong bases or flammable liquids. Powered by a 3.6V lithium-ion battery, this sprayer results in 3-4x more efficiency than a manual sprayer. This sprayer can be operated continuously for up to 45 minutes and spray more than 7 gallons per battery charge at a distance of 15 feet.



FlowZone FZSAAE SPECIFICATIONS			
Model number	FZSAAE	Pump type	gear pump
Battery type	Lithium-ion	Continuous working time	45 min
Battery voltage	3.6V	Working pressure	45 psi
Battery capacity	2600mAH	Spray distance	15 feet
Battery charging time	2 hours	Tank capacity	4 gallons
Battery cycle life	1000 cycles	Liquid flow	0.17 gallon/min
Battery charger	5V / 1A	Pump life	200 hours



THIS PRODUCT IS DESIGNED TO APPLY CHEMICALS THAT MAY BE HARMFUL AND COULD CAUSE SERIOUS PERSONAL INJURY IF INHALED OR BROUGHT INTO CONTACT WITH THE USER. FAILURE TO READ AND FOLLOW OPERATION GUIDE BEFORE USE AND/OR MISUSE OF THIS PRODUCT COULD RESULT IN INJURY.



What's in the box.

- 1. SPRAY GUN
- 2. HOLSTER (ROLLER)
- 3. HOLSTER (BACKPACK)
- 4. TANK (4 GAL)
- 5. ROLLER HANDLE

- 6. BATTERY CHARGER
- 7. COILED HOSE
- 8. SCREW, BOLTS & NUTS
- 9. TANK CAP / HOSE
- 10. BACKPACK STRAPS

- 11. INTAKE FILTER
- 12. EXTENSION WAND
- 13. ROLLER HANDLE BAR
- 14. ROLLER BASE

STEP 1a: Set up as a rolling sprayer.

1 Remove the nuts and bolts from liquid intake cap.



2 Insert roller handle bar into roller base so the end with 2 holes is in the base.





4 Slide the roller holster onto the middle of the roller handle bar and screw into the bar.

handle to top of bar and thread bolt and nut through the slot. Tighten both top and bottom knobs to the bar.





Continue to Step 2.

STEP 1b: Set up as a backpack sprayer.

1 Remove the nuts and bolts from liquid intake cap.



2 Attach each metal loop on the backpack straps to the bottom two loops on the tank.



3 Loop each fabric strap through the top loop of the tank and thread back through the bottom side of the buckle.



Place the spray gun/ extension wand holster over the tank outlet hole.

STEP 2: Get started spraying.


1 Fully charge the battery prior to first operation.



3 Connect coiled hose with on/off switch end attached to spray gun & other end connected to tank cap.



2 Fill the tank with pre-prepared liquid through intake filter and securely tighten tank cap.

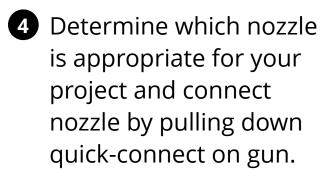



- 1. **Short nozzle** = adjustable, ranging from a jet spray to a conical spray.
- 2. **Extension wand** = conical misting spray
- 5 Disengage handle lock and ON/OFF switch and press down on the spray gun trigger to begin spraying.

NOTE: Can spray continuously or on-command.

STEP 3: After you spray.

1 Rinse out the solution you sprayed with water and spray water through the sprayer for 3-5 minutes to completely rid tank of chemicals.

NOTE: Many spray materials will harden if left in the sprayer and plug up the nozzle, shut-off valve or supply tube.

- 2 Disconnect coiled hose from tank (not gun) and spray to completely empty hose and gun of liquid.
- 3 Dry sprayer tank completely.
- 4 Clean the nozzle.
- **5** Always store tank in a clean, empty and shady location protected from extreme heat or frost.
- 6 For long-term storage, regular discharging and recharging of the battery is required (with an interval of either every 2 weeks, one month, or two months) to maximize battery life.



Other important considerations.



Do not operate the spray gun without liquid in it. This may damage the pump.



After long periods of time without use, the battery may have a low voltage and will require extended charging.



Always wear protective clothing, respirator, gloves, eye protection, etc. when using chemicals.



Never spray chemicals against the wind or towards humans, animals or food.



Don't operate sprayer in temperatures exceeding 100°F or lower than 32°F.



Never operate with strong acids, strong bases or flammable liquids.



Never fill the sprayer with hot liquids (max. temp. = 85°F).



Do not leave the sprayer in reach of children or persons not qualified to handle it in a proper fashion.



Do not dispose of lithium-ion battery with household waste, recycle where facilities exist.



Always use FlowZone original replacement parts.

FlowZone Limited Warranty

WESSOL, LLC warrants (to the original purchaser) that this product will continue to function as intended if used in accordance with operating instructions (under normal consumer use) for a period of one year.

If the product fails to function as intended **DO NOT RETURN IT TO THE STORE**, call our customer support hotline at **+1 803-339-2500** or email **spraysquad@fzspray.com**. We will, at our option, repair or replace any non-functioning parts without charge (shipping & handling charges will apply). WESSOL, LLC shall have the option of requiring the return of the non-functioning product; together, with the proof of purchase, to establish a claim under this warranty. This warranty does not apply to damage resulting from accident, misuse, neglect, alterations, or operation not in accordance with instructions, commercial use, or normal wear.

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR CONSUMER USE, ARE LIMITED TO THE DURATION SPECIFIED ABOVE. WESSOL, LLC'S LIABILITY IS LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE NON-FUNCTIONING PRODUCT OR PART. WESSOL, LLC EXCLUDES LIABILITY UNDER THIS WARRANTY FOR ANY AND ALL INCIDENTAL AND CONSEQUENTIAL LOSS OR DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

FOR ANY QUESTIONS OR CONCERNS:



To register your sprayer, visit: fzspray.com/register



fzspray.com spraysquad@fzspray.com +1 803-339-2500

DISTRIBUTED BY: WESSOL, LLC 1750 Highway 160 West, Suite #101 Fort Mill, South Carolina 29708